

Remote Functions

SAT Mode

Correct mode for operating your DISH system.

TIP: Press and release the SAT mode button to ensure you are in the proper mode for controlling your receiver.

Menu

Access features and settings, including Parental Controls, My Account and more.

Recall

Go back to the last four channels viewed.

Info

Display additional program info.

(*)/Format

Change the shape of the picture on your TV screen to match the frame size of the program you are watching.



Guide

Display current and future TV program listings.

Cancel

Go back one on-screen menu at a time. (Note: This may not be the previous screen you were viewing.)

View Live TV

Return to watching live TV. Also exits all on-screen menus.

DVR Controls

See the Getting Started with Your DVR guide for further instructions on how to use your DISH DVR.

Note: Remote may vary.

1. Turning Your TV On and Off

- Start with your TV and DISH receiver **OFF**.
- To turn your TV **ON**, press and release the red TV POWER button on your **DISH remote**.



The screen saver appears whenever your receiver is OFF to remind you that your TV is still ON.

- To turn your TV **OFF**, press and release the red TV POWER button on your **DISH remote** again.

2. Turning Your Receiver On and Off

- Start with your TV **ON** and DISH receiver **OFF**.
- To turn your receiver **ON**, press and release the red POWER button on your **DISH remote**.



A TV picture appears.

- To turn your receiver **OFF**, press and release the red POWER button on your **DISH remote** again.

3. Staying on the Correct TV Input

Your TV needs to remain on the correct input to watch your DISH service. If your TV is not on the correct input, your TV may display a black or blue screen, depending on your TV. The input your TV needs to be on may be noted on a sticker on the back of your DISH remote.

How You Might Get On the Wrong Input:

- Changing the input on your TV to operate a DVD player or video game system
- Changing your TV input using your TV remote or the TV itself
- Pressing the INPUT button on your DISH remote when you are not in SAT mode
- Power outage causing your TV to get off the correct input

4. Fixing a Black or Blue Screen

For demonstration only

Get your TV **OFF** the correct input by pressing and releasing the INPUT or SOURCE button on your **TV remote** or the TV itself. (If you are already on a black or blue screen, go to 4a.)



A black or blue screen appears.

- Get your TV back **ON** the correct input.

Cycle your TV through its inputs by pressing the INPUT or SOURCE button on your **TV remote** or the TV itself.



A TV picture appears.

- Once your TV picture is restored, press and release the SAT mode button on your **DISH remote** to ensure you're in the proper mode for controlling your receiver.



The SAT button lights up.

Hopper with Sling

Room _____ Input _____

Joey #1

Room _____ Input _____

Joey #2

Room _____ Input _____

Joey #3

Room _____ Input _____

5. Changing Channels

There are three ways to change channels on your receiver.

Type a channel number using the number buttons on the keypad.



- OR -

Press and release the CHANNEL UP/DOWN buttons.



- OR -

Use the Program Guide.

a. Press and release the GUIDE button.



b. Press and release the CHANNEL UP/DOWN or the PAGE UP/DOWN buttons to highlight the channel you want to watch.



c. Press and release the SELECT button.



The TV channel changes.



The TV channel changes.



The Program Guide appears.



The Program Guide moves up or down.



The TV changes to the highlighted channel.

6. Selecting a Favorites List to Display on Your Program Guide


a. Press and release the GUIDE button twice.



b. Press and release the CHANNEL UP/DOWN buttons to choose the Favorites List you would like to see, then press and release the SELECT button.



The Favorites List drop down menu appears.

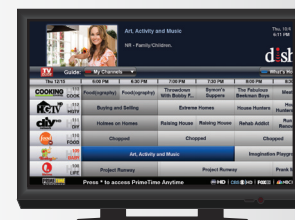

The Program Guide indicates which list you are on. If you are on the All Channels list, channels shown in red are not included in your subscription.

7. Exiting On-Screen Menus

When you're in an on-screen menu, it's easy to exit the on-screen menu and return to the program you were watching.

a. To exit an on-screen menu, press and release the VIEW LIVE TV button.



The TV is on a menu screen.



The menu screen is exited and a TV picture appears.

TIP: The Cancel button on your DISH remote is another option for exiting one on-screen menu at a time.

Additional Tips

Setting Parental Controls:

- Press and release the MENU button.
- Select "Settings" and then select "Parental Controls."
- If "Parental Controls" are "Off" then select "On."
- Under "Restrictions," choose from the pre-set locks for a high, medium, or low restriction level, or select "Custom" to customize restrictions.
 - To copy these settings to a Joey in a remote location:
 - Select "Copy Settings."
 - Select location(s) to which settings should be copied.
 - Select "Yes."
- Select "Save."
- Enter and confirm the 4-digit password.

Setting Closed Captioning:

- Press and release the MENU button.
- Select "Settings" and then select "Closed Captioning."
- Scroll to the Closed Captioning box and select "On."
- Select "Save."

Troubleshooting:

75% of all technical problems that an agent can help you with can be solved by following these five easy steps:

- Make sure your DISH remote is in SAT mode.
- Make sure your TV is on the correct input.
- Make sure you're on the correct Favorites List.
- Check for anything obstructing the signal to your satellite dish, such as tree branches, severe rain, or snow build-up. If it is safe to do so, remove the obstruction or wait for it to pass.
- Reset your receiver by unplugging it from the wall for 10 seconds. Plug it back in and turn it on.

Where to go for additional information:

- Press and release the MENU button and then select "Help."

- Visit mydish.com/support.

